

LC200 Manual • TeleMarketer Eraser™ SIT Tone Generator

Installation:

- 1) Disconnect phone from phone line jack and plug it into one of the jacks on the LC200.
- 2) Connect one end of telephone cord included into the LC200 and the other end into the phone line jack.

Programming Steps:

- 1) To enter programming lift phone off hook press the button on the LC200 down for 6 seconds then release button, and you should hear a beep. Once in program mode you have 5 seconds to start your operation mode programming. If you delay longer than 5 seconds you will hear 2 beeps timeout and the LC200 will exit programming mode.
- 2) You are now ready to program the operation mode. Modes are as follows (1 = Button Activated, 2 = Off Hook and Button Activated).
- 3) To program the operation mode enter programming as described in step (1) then push button 1 time for button activated or 2 times for off hook and button activated after about 1 second you will hear 2 beeps telling you the program was accepted. When you program the mode make sure that the time between button pushes is no longer then 900ms.

Operation Modes:

- Button Activated - Pressing the button on the LC200 will generate a CIT tone.
- Button and Off Hook Activated - The LC200 will generate a CIT tone when the phone is lifted off of hook or when the user presses the button.



LC200 • Users Manual